


choice and confirm, read to quit. If need to +- numbers, functions key working as +, read key working as -. The common used functions include turn pager off / alert mode / set time / Choose alert ...

8

6. Low battery and charging.

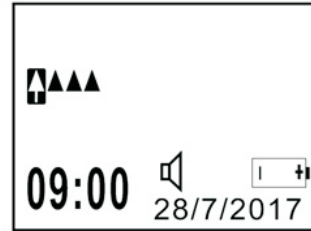

When battery is low power, the battery icon will display blank as photo, you need to charge or replace AAA batteries, or it will stop work.

When charging, The LCD will show charging information if the battery is charging or full.

Only charging type pagers can be charging.

9

Attention: Only for charging type pagers



10

Other information:

- Press 3S can on/off backlight if not auto light.
- Low battery will not receive.
- 1 full charging need about 2 hours.
- How to working with buttons please refers to button manual.

11

The END