

ECHOLINK DTMF Functions

Command	Description	Default
Connect	Connects to a station on the Internet, based on its node number.	num
Connect by Call	Connects to a station on the Internet, based on its callsign.	C+call+#
Random Node	Selects an available node (of any type) at random, and tries to connect to it.	00
Random Link	Selects an available link or repeater (-L or -R) at random, and tries to connect to it.	01
Random Conf	Selects a conference server at random, and tries to connect to it.	02
Random User	Selects an available single-user station at random, and tries to connect to it.	03
RandomFavNode	Selects an available node (of any type) at random from the Favorites List, and tries to connect to it.	001
RandomFavLink	Selects an available link or repeater (-L or -R) at random from the Favorites List, and tries to connect to it.	011
RandomFavConf	Selects a conference server at random from the Favorites List, and tries to connect to it.	021
RandomFavUser	Selects an available single-user station at random, and tries to connect to it.	031
Disconnect	Disconnects the station that is currently connected. If more than one station is connected, disconnects only the most-recently-connected station.	#
Disconnect All	Disconnects all stations.	##
Reconnect	Re-connects to the station that most recently disconnected.	09
Status	Announces the callsign of each station currently connected.	08
Link Down	Disables EchoLink (no connections can be established).	(none)
Link Up	Enables EchoLink.	(none)
Play Info	Plays a brief ID message.	*
Query by Call	Looks up a station by its callsign, and reads back its node number and status.	07+call+#
Query by Node	Looks up a station by its node number, and reads back its callsign and status.	06+num
Profile Select	Switches to a different stored set of configuration settings (0 through 9).	B#+num
Listen-Only On	Inhibits transmission from RF to the Internet.	0511
Listen-Only Off	Restores normal transmission from RF to the Internet.	0510