


Standard Code Plug Configuration - Programmable Keys

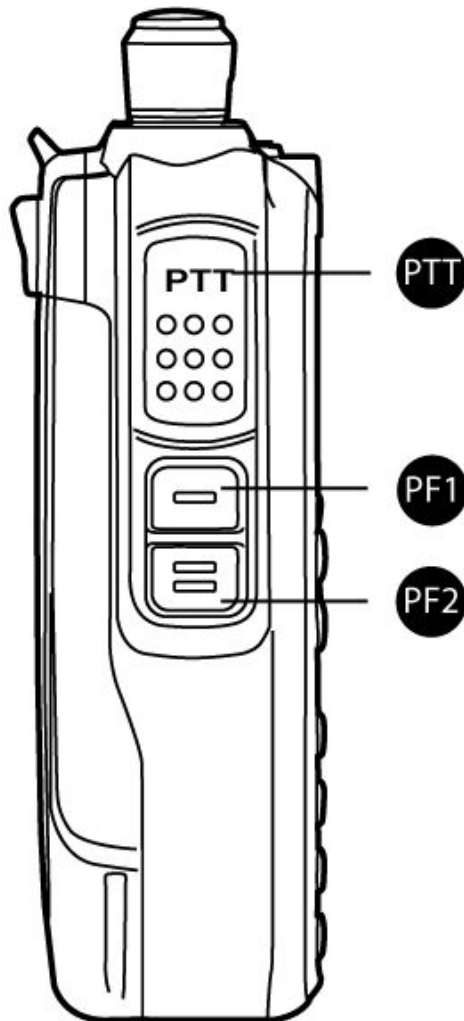

PTT


PF1

PF2

Short Key: Power
Long Key: Voltage

Short Key: Zone Select
Long Key: Dial

- Power** = Low, Medium, High, Turbo
- Voltage** = Displays the Battery Voltage
- Zone Select** = Select a zone by the numerical id
- Dial** = Manual Dial of Private or Group Talk ID (# key toggles)
- Digital Monitor Mode** = Radio is able to hear all Digital Traffic

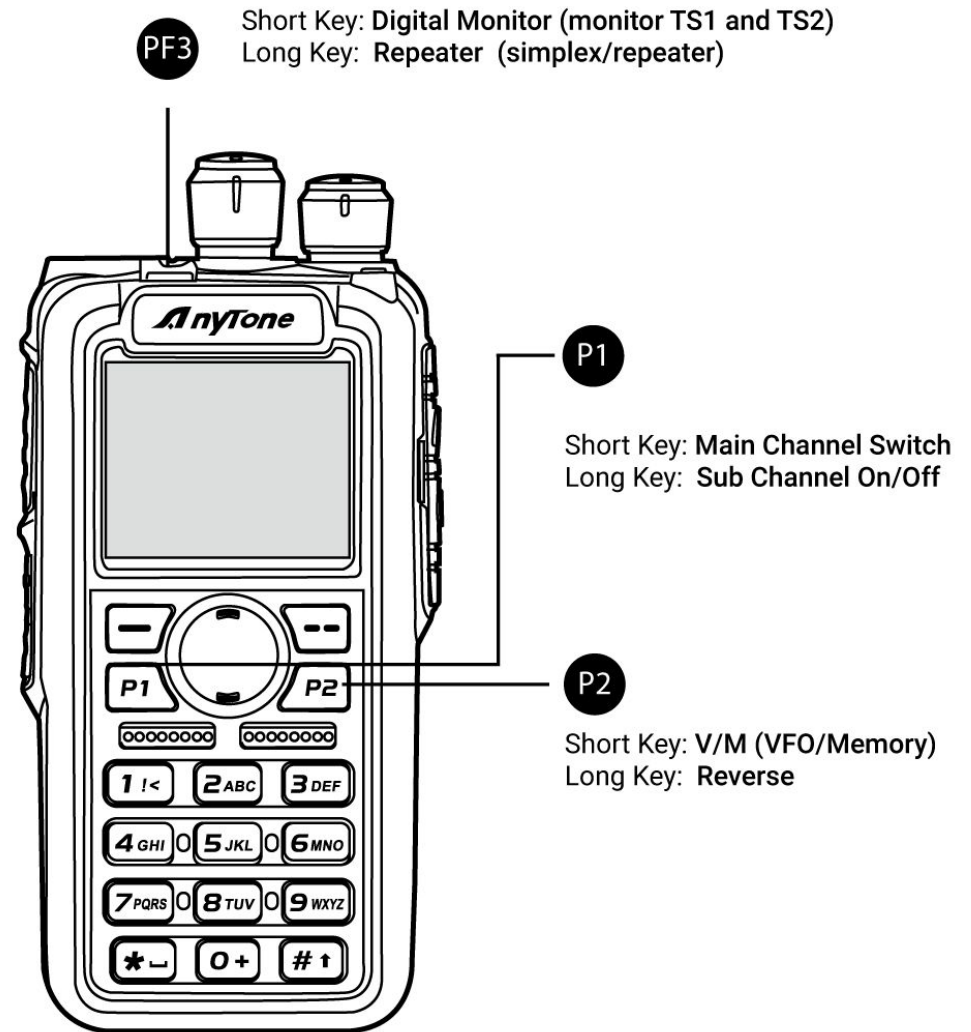

PF3

Short Key: Digital Monitor (monitor TS1 and TS2)
Long Key: Repeater (simplex/repeater)

P1

Short Key: Main Channel Switch
Long Key: Sub Channel On/Off

P2

Short Key: V/M (VFO/Memory)
Long Key: Reverse

- Main Channel Switch** = Switches between the channel in Dual Mode
- Sub Channel On/Off** = Toggles the Sub Channel on/off
- V/M** = Sets the Radio into VFO or Memory Mode
- Reverse** = In Analog log mode puts the radio to the input frequency
- Repeater** = Toggles between repeater offset and Simplex Mode